BEC24

ASSEMBLY INSTUCTIONS

Getting started:

prepare a protection layer, a screwdriver STEP 1: Joint two side panel together


STEP 2: Attach top panel STEP 3: Attach bottom panel STEP 4: Attach toekick on

STEP 5: Attach frame on

STEP 6: Put on the adjustable shelves

STEP 7: Hinge the door onto the face frame and adjust the cover-space

| 9 | Wood Block | 2 | wood block | |
|---------------|-------------------------------|-----|------------------------|--|
| 8 | 135 DEGREE ANGLE | 3 | 135° angle | |
| 7 | 1/2" HINGE | 4 | 1 1/2" hinge | |
| 6 | 3/4" ROUND HEAD SCREW | 4 | 3/4" round head screw | |
| 5 | BUMPER | 4 | Bumper | |
| 4 | SHELF CLIP | 12 | Shelf clip | |
| 3 | 9/16"ROUND HEAD SCREW | 78 | 9/16" round head screw | |
| 2 | CLEAT | 18 | Cleat | |
| 1 | 1"FLAT HEAD SCREW FOR CARCASS | 5 | 1" flat head screw | |
| NO. | Description | QTY | PICTURE | |
| HARDWARE LIST | | | | |

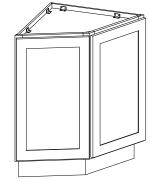

| PARTS LIST | | | |
|------------|------------------|---|--|
| NO. | NO. Description | | |
| Α | SIDE PANEL | 1 | |
| В | SIDE PANEL | 1 | |
| С | TOP&BOTTOM PANEL | 2 | |
| D | TOE KICK | 2 | |
| E | FACE FRAME | 2 | |
| F | ADJUSTABLE SHELF | 2 | |
| G | CABINETS DOOR | 2 | |

